

PARTS VIEW

FKH TOOLS

Item 1



Item	Part Number	Description	Application
1	H47-0101	Socket (8P 125mm)	TP Axle, Hub cap, Bearing Nut

Item 2



Item 3



Item	Part Number	Description	Application
2	1011-001	Socket (8P 124mm)	11t Unitised Bearing Nut
3	1011-002	Socket (8P 107mm)	9t Unitised Bearing Nut

PARTS VIEW

Item 4



Item	Part Number	Description	Application
4	1022-001	Spacer	Torque Rod Bush Installation

Item 5



Item	Part Number	Description	Application
5	KH1007-001	HD Hub Puller	9t /11t Unitised Bearing Hub

PARTS VIEW



Item 6



Item 7



Item 8

Item	Part Number	Description	Application
6	1024-001	Wear Gauge	50mm King Pin
7	1024-002	Wear Gauge	75mm King Pin
8	1024-003	Wear Gauge	90mm King Pin
9	N500114-001	Turntable-Lock Adjustment Tool	50mm & 90mm Turntables

Item 9



The king pin is not included in the tool!

A standard FKH 50mm or 90mm king pin needs to be bolted in there.

KPB50 or KPB90

PARTS VIEW

Item 10



Item	Part Number	Description	Application
10	1023-001	Pivot Bush Replacement Tool	KT & KI Suspension
11	H11-0301P21	Seal Installation Tool	17t axle KF75 & FB24

Item 11

