



Fuwa K Hitch - Maintenance Schedule

www.khitch.com.au

Check and use the specific FKH Installation, Maintenance & Service Bulletin for each product at www.khitch.com.au

Operating conditions		NOTE: The maintenance frequency may need to be changed subject to application and vehicle operating conditions.	At PD and after initial assembly or a major part has been replaced	1st Service	Daily	Weekly	Monthly	Quarterly	1/2 Yearly	Annually	Every.....Km	FKH Installation, Maintenance & Service Bulletin (IMSB)
N	On highway only											
F	Off highway											
C	Customer specific											

AXLE

	1	Check wheel nuts	NF	NF				F	N			KPM-008-0410 KPM-004-0310 KPM-003-0310 KPM-005-0310 ConMet 10084476 Wabco PAN19 & PAN 22
	2	Check all fasteners	NF	NF					F	N		
	3	Check brake adjustment	NF	NF				F	N			
	4	Lubricate all grease nipples (replace damaged grease nipples)	NF	NF				F	N			
	5	Check wheel bearings and adjust if required		NF					NF		N 45,000 F 25,000	
	6	Check lubricant in wheel bearings, replace if required							F		N 90,000 km	

AIR SUSPENSION

	1	Check all fasteners	NF	NF					F	N		FKH KT: KPM-001-0514 KT: KPM-001-0214 KT: KPM-001-0316 Weweler: WSM-HDLVWF-EN SIG-MBS-EN
	2	Check u-bolts	NF	NF						F	N	
	3	Check shock absorbers for leaks and bush wear		NF						F	N	
	4	Check HCV for leaks and correct adjustment		NF						F	N	
	5	Check pivot bolt, TF bush and hanger wear pad for wear and excess movement								F	N	
	6	Check air spring (air bag) for leaks or damage		NF					F	N		

MECHANICAL SUSPENSION

	1	Check all fasteners	NF	NF					F	N		KPM-002-0310
	2	Check u-bolts	NF	NF						F	N	
	3	Lubricate all grease nipples (replace damaged grease nipples)	NF	NF				F	N			
	4	Check torque rod bushes and rocker box bushes		NF					F	N		
	5	Check springs		NF					F	N		

5th WHEEL & BALL RACE

	1	Check all fasteners and springs	NF	NF					F	N		KPM-002-0410 KPM-001-0915 KPM-007-0310 KPM-001-0617 KPM-001-0718
	2	Check operation and wear of slide block, safety catch and jaw(s)	NF	NF				F	N			
	3	Lubricate all grease nipples and check grease lines	NF	NF				F	N			
	4	Inspect welds to bridge, bridge support, feet to base plate							F	N		
	5	Check wear limits according to bulletin								F	N	

KING PIN

	1	Check all fasteners	NF	NF					F	N		KPM-006-0310
	2	Check for damage and wear limits according to bulletin							F	N		
	3	Check skid plate condition							F	N		

LANDING LEG

	1	Check all fasteners	NF	NF					F	N		KPM-002-0612
	2	Lubricate all grease nipples (replace damaged grease nipples)	NF	NF					F	N		

NOTE: Any instructions from the vehicle OEM must be considered first!